

EZ16/960 AUDIO AND ALARM I/O 25 PIN D-SUB CONNECTOR PIN CONFIGURATION

Dsub socket as viewed from rear of DVR



EZ960 16

Audio

| Pin | Definition | Pin | Definition | Pin | Definition |
|-----|-------------|-----|----------------|-----|-------------|
| 1 | Audio In 1 | 10 | GND | 19 | Audio In 12 |
| 2 | Audio In 3 | 11 | GND | 20 | Audio In 14 |
| 3 | Audio In 5 | 12 | Reserved | 21 | Audio In 16 |
| 4 | Audio In 7 | 13 | Main Audio Out | 22 | GND |
| 5 | Audio In 9 | 14 | Audio In 2 | 23 | GND |
| 6 | Audio In 11 | 15 | Audio In 4 | 24 | GND |
| 7 | Audio In 13 | 16 | Audio In 6 | 25 | Reserved |
| 8 | Audio In 15 | 17 | Audio In 8 | | |
| 9 | GND | 18 | Audio In 10 | | |

Alarm I/O

| Pin | Definition | Pin | Definition | Pin | Definition |
|-----|----------------|-----|-----------------|-----|-------------|
| 1 | Alarm Out Open | 10 | Alarm In 5 | 19 | Alarm In 10 |
| 2 | Alarm Out COM | 11 | Alarm In 6 | 20 | Alarm In 11 |
| 3 | RS485 D+ | 12 | Alarm In 7 | 21 | Alarm In 12 |
| 4 | RS485 D- | 13 | Alarm In 8 | 22 | Alarm In 13 |
| 5 | Reserved | 14 | Alarm Out Close | 23 | Alarm In 14 |
| 6 | Alarm In 1 | 15 | Reserved | 24 | Alarm In 15 |
| 7 | Alarm In 2 | 16 | Reserved | 25 | Alarm In 16 |
| 8 | Alarm In 3 | 17 | Reserved | | |
| 9 | Alarm In 4 | 18 | Alarm In 9 | | |