

EZ4/960 AND EZ8/960 AUDIO/ALARM I/O 25 PIN D-SUB CONNECTOR PIN CONFIGURATION

Dsub socket as viewed from rear of DVR

## $\begin{array}{c} \mathbf{0} \ \mathbf{$

## EZ960/LITE/4/8

## Alarm I/O / Audio

Pin	Definition	Pin	Definition	Pin	Definition
1	GND	10	Alarm In 1	19	Audio In 2
2	GND	11	RS485 D+	20	Alarm In 8 (8ch only)
3	Audio In 7 (8ch only)	12	Alarm Out Com	21	Alarm In 6 (8ch only)
4	Alarm In 5 (8ch only)	13	Alarm Out Open	22	Alarm In 4
5	Alarm In 3	14	GND	23	Alarm In 2
6	Audio In 1	15	Main Aud <del>i</del> o Out	24	RS485 D-
7	Alarm In 7 (8ch only)	16	Audio In 8 (8ch only)	25	Alarm Out Close
8	Alarm In 5 (8ch only)	17	Audio In 6 (8ch only)		
9	Alarm In 3	18	Audio In 4		